




www.pavetech.com

PAVERSCRIBE™


Paver Marking Tool

When *not* using a *soldier* course

Standard use with Herringbone Pattern

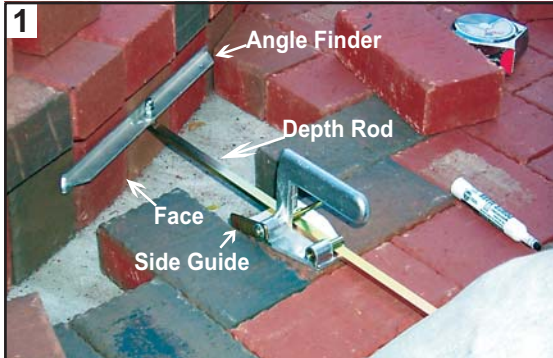

Step 1. Align unit on the the left or the right side of the paver, preferably on the left. Snug tight into the Pocket with the left Side Guide flipped down.

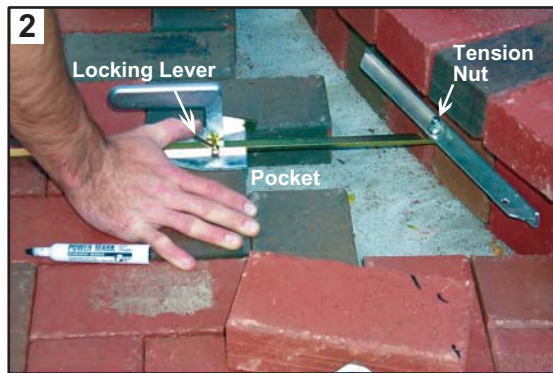


Step 2. Release Locking Lever. Push Depth Rod forward and adjust Angle Finder to be parallel to face. Press down Locking Lever. Make sure Tension Nut is not too loose.



Step 3. Move **PAVERSCRIBE** to marking paver. Use Side Guide. Align to back corner of paver and mark from side of Angle Finder. When cutting, remove mark.




An indispensable aid for the exact measuring and marking of lengths and angles for cutting paving stones.
The measuring and marking guide is made completely of metal, making it suitable for professional use and can be used to measure all available types of pavers and slabs.

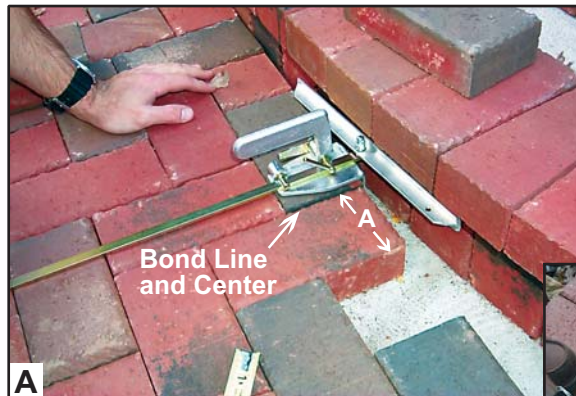

A. Set **PAVERSCRIBE** on Bond Line near center of where cut paver is to be set. (Follow Step 2.)

B. Measure Distance A. Transfer distance measurement to marking paver. Align **PAVERSCRIBE** to Distance A, mark and cut paver.

More Difficult Are Half Marks On Herringbone With A Curve Face.

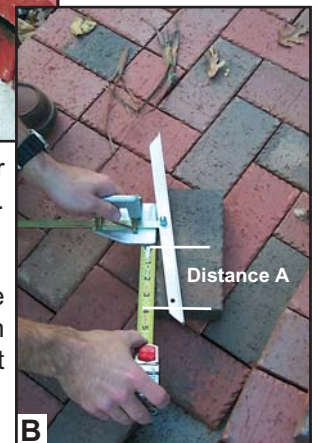

Shipping Weight: 3 lbs. (1.4 kg)

PAVE TECH, INC.

PO Box 576 Prior Lake, MN 55372 US Ph. 952-226-6400 Fax 952-226-6406
TOLL FREE 800-728-3832 www.pavetech.com sales@paveedge.com

PAVE TECH©2001